

Mounting instruction for 20 DKF+ (GN) in Column Rack

V-MI- 0181



Spare part list

1051077	LASHING (SPLIT IN 3) ADJUS. BLACK
1051078	LASHING (SPLIT IN 3) ADJUS. BLACK COMPL. WITH WICHARD SLIP HOOK AND SHACKLES

Before mounting of containers

Securing of bracket

Ensure that the bracket for the upper container is properly secured before mounting of the lower container.

The lashing may be used for this purpose.



Mounting instruction for 20 DKF+ (GN) in Column Rack

V-MI- 0181




Mounting of containers

Shackle

Ensure that the pin in the shackle is inserted and secured from the top.

Lashing

Ensure that the lashing is placed inside the bracket as shown to hold the containers in the right place on the rack - see complete installation on the next page.

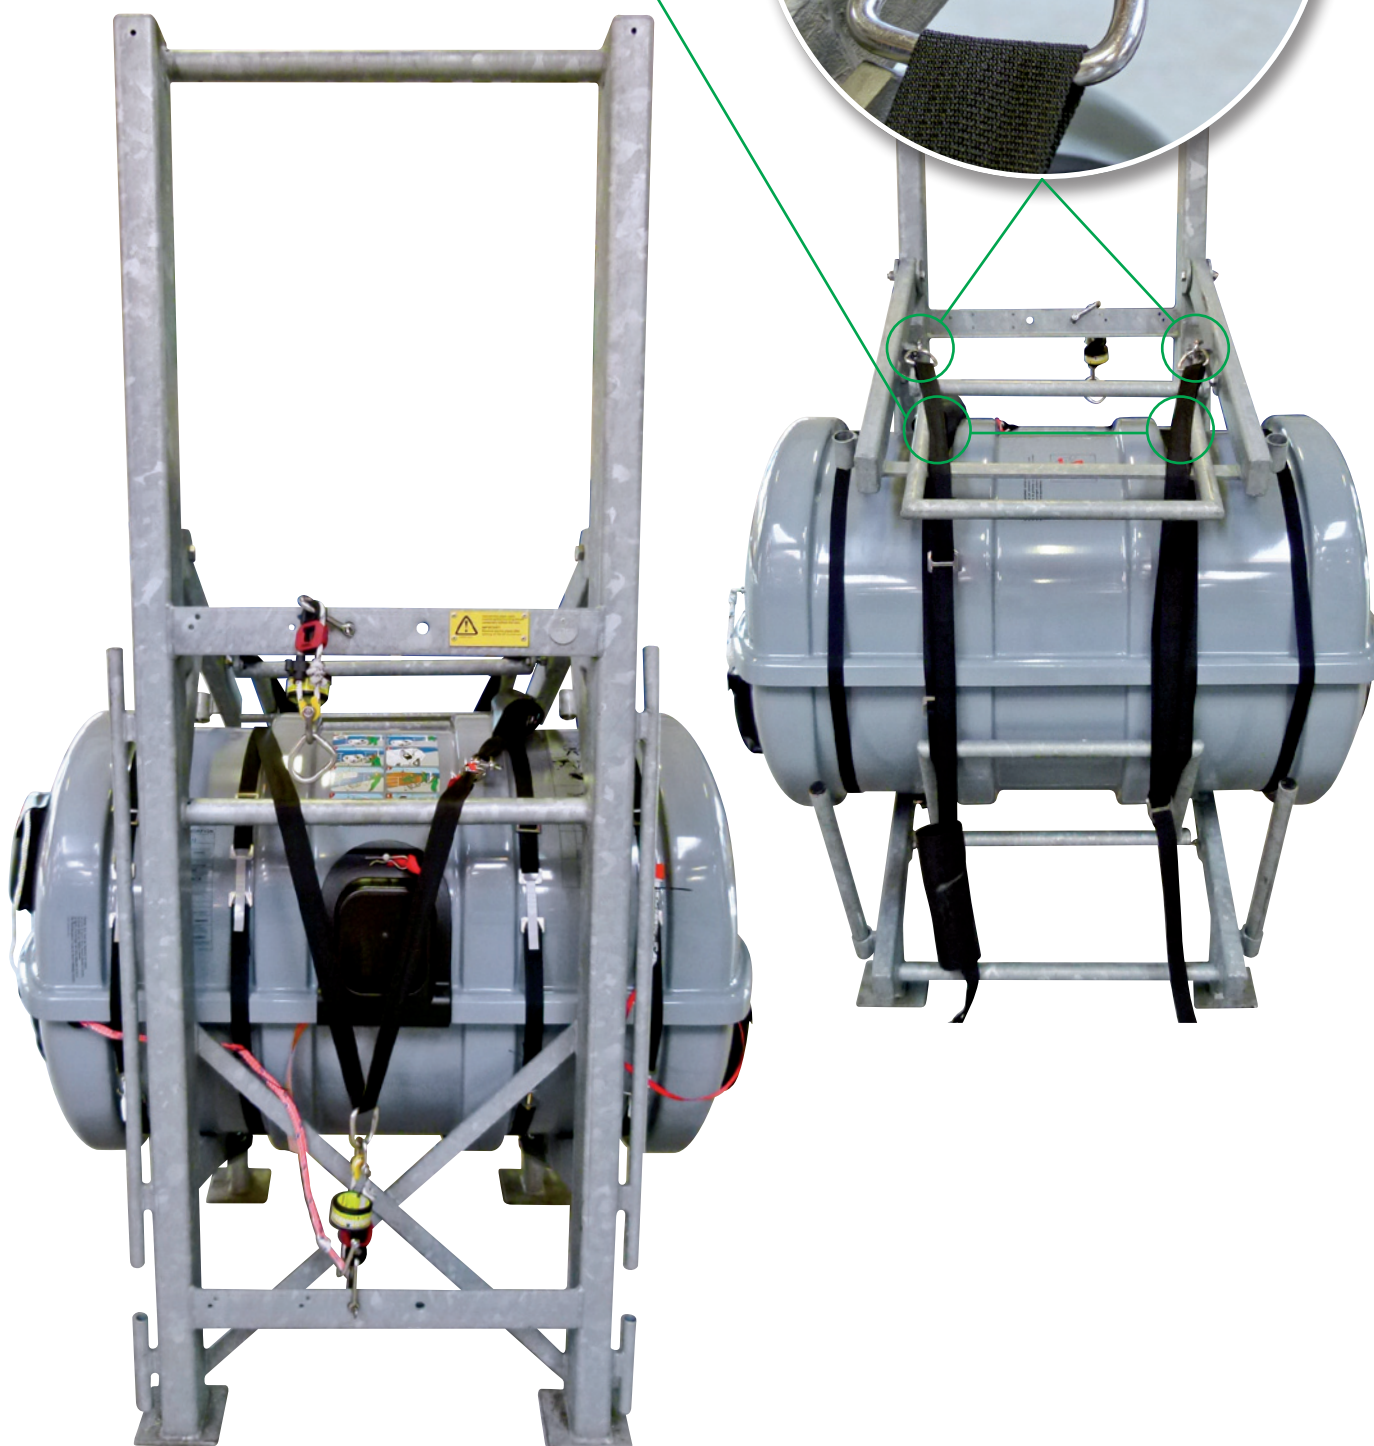

Mounting instruction for 20 DKF+ (GN) in Column Rack


V-MI- 0181



Mounting with HRU's

Ensure that the mountings with HRU's (Hydrostatic Release Unit) on racks are as shown on the photos - see enlargement of the HRU on the next page.

Column rack shown from the front and back.

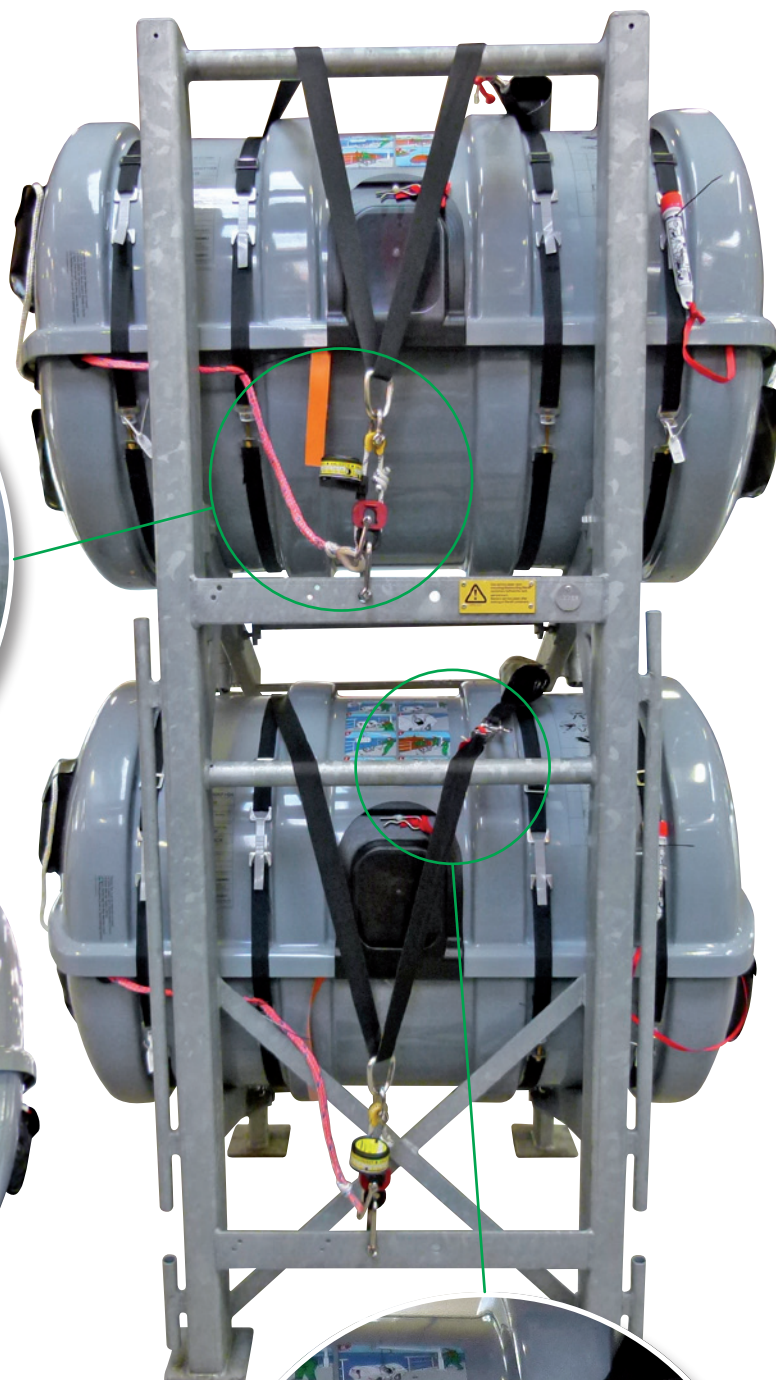

Mounting instruction for 20 DKF+ (GN) in Column Rack

V-MI- 0181



Marking of expiry date on HRU

The HRU unit is labelled with fields to state month and year.

Remove the fields which state expiry month and year (expiry date on standard HRU is 2 years from mounting month).

Example:


Mounting month and year:

APR. 2012

Expiry month and year:

APR. 2014

A HRU unit not properly marked with expiry date **MUST** be replaced.

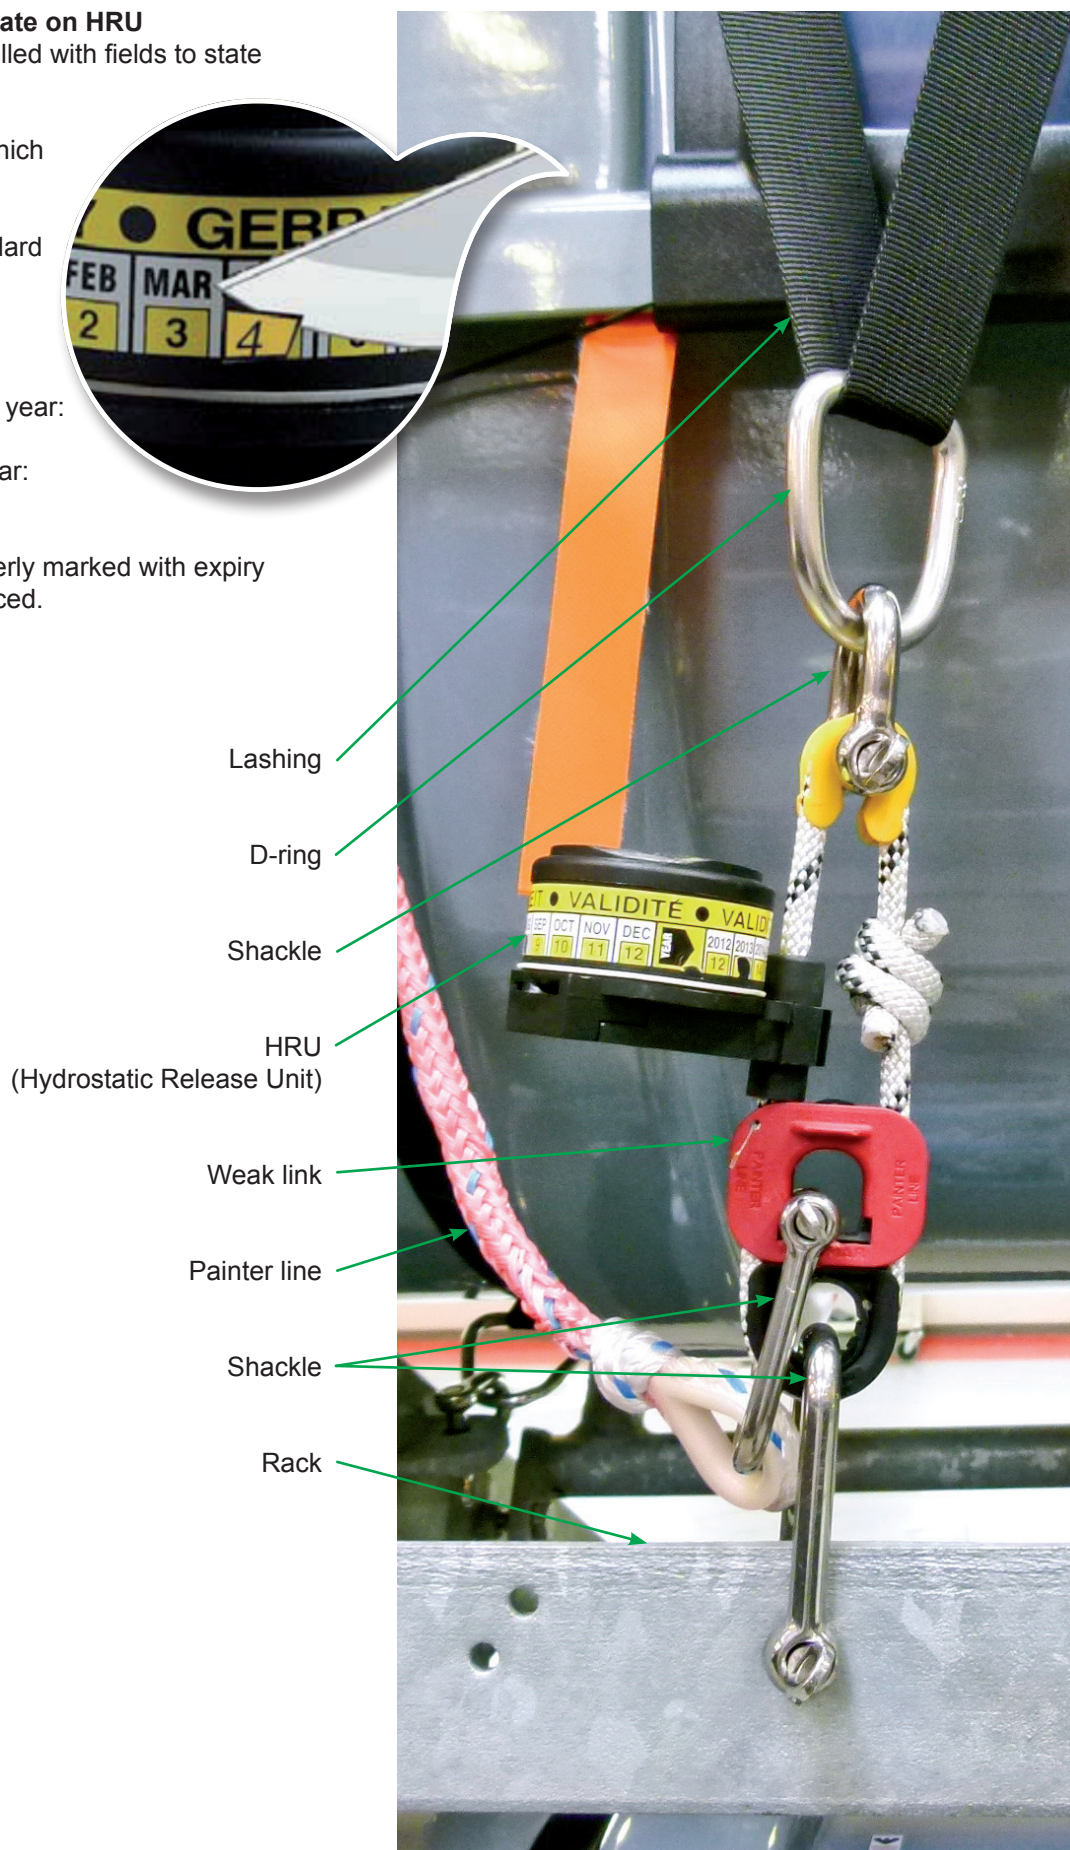

Mounting instruction for 20 DKF+ (GN) in Column Rack

V-MI- 0181



Very important !

Remember to remove the service pipes after lashing of liferaft containers and servicing.



1008583 (ed.2)

Use service pipes upon mounting/dismounting liferaft containers to/from the rack.

IMPORTANT!
Remove service pipes after lashing of liferaft containers.

Column rack shown from both sides.

Service pipes

